




**Tool Base Adapter
Product # 55450
(Instructions for Installation)**

1. Select the area on the P-Seat where you want to permanently attach your tool base.
2. To ensure clean, precise holes while drilling, position the adapter on the OUTSIDE of the P-Seat at the position you want to install it, making sure that the Tool Base Adapter is at least 1 inch away from any edge of the seat.
3. Mark drill sites, being careful to stay centered.
4. Remove the Tool Base Adapter.
5. With a 1/4 inch drill bit, drill four holes as accurately as possible.
6. Using the hardware supplied, insert screws into the Tool Base. (See illustration for the proper mounting order.)
7. Insert Tool Base onto seat.
8. Attach Tool Base Adapter to the INSIDE of the seat.
9. Tighten down the nut.
10. Attach any needed apparatus.

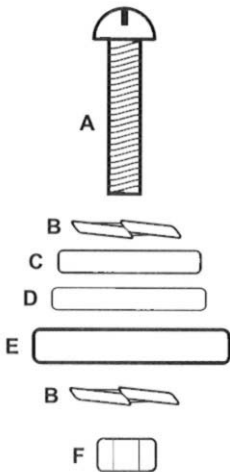

- A. Screw
B. Lock Washer
C. Tool Base (Customer Supplied)
D. "P" Splicer Seat
E. Tool Base Adapter
F. Nut**