


## Vise Clamp Adapter 3M/MS Square

Product # 55420  
(Practice for Installation)




1. Select the area in which the Clamp Adapter is to be attached. (See illustration A for suggested placement sites)

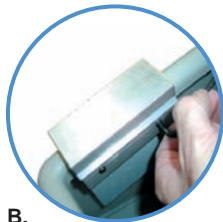

2. With one hand, place wooden plate on inside wall of Splicer Seat and pull up until it is flush with inside lip.

3. Place aluminum bracket over rail of box with set screws facing inside.

4. Firmly tighten set screws with hex key supplied. (See illustration B)

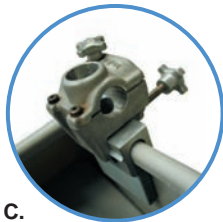

5. Attach 3M clamp to aluminum bracket. (See illustration C)

If you have any questions concerning this practice, please call us toll free at 800.542.7011.